

About Carter-Health	1
Cleanroom Design & Installation	2
Activity Documentation Software	3
PrePak Disposable Products	4
Clean Room Accessories & Cleaning Supplies	5



About Carter-Health

www.Carter-Health.com

Carter-Health is a turn-key solutions provider for creating sterile environments for I.V. compounding facilities. Our expertise in this area assists healthcare facilities in meeting the stringent requirements of USP 797. We have successful installations across the United States in locations such as Texas, Florida, Washington D.C., New York, Pennsylvania, Tennessee, Louisiana, Wyoming and Utah.

As a design-build company, we allow the client to focus on their core competency while placing Carter-Health in complete control of the cleanroom build-out. We are equipped to handle every aspect of your project allowing for a smooth transparent installation.

Project management capabilities include but are not limited to:

- Pulling Job Permits
- Engineering
- General Construction
- Plumbing
- Electrical
- HVAC
- Flooring

After your clean environment is built, there are several support items needed to keep your ongoing process compliant with the regulations. Carter-Health provides high-quality non-woven disposable gown products that are comfortable to the touch, light-weight and designed to be cool even in the most stressful work environments. A unique feature about the Carter-Health disposable product line is that they come in kits. PrePak Kits allow the client to order one line item that has all the products needed to support your operation vs. having to order numerous line items from numerous vendors. Streamline your product mix and vendor list!

A.R.T. (Accurate Recording Technology) helps manage your cleanroom and personnel activities to ensure USP 797 compliance. The software is designed for ease of use and data input. Staff members are currently stressed and under-pressure to document numerous work-activities. A.R.T. (Accurate Recording Technology) allows for quick, easy capture of required data with just a few clicks of the mouse.

No matter where you are in the planning stages, our team can help ensure that you acquire the proper solution for your needs.

For more information contact us at: (407) 296-6689 or info@carter-health.com



Clean Room Design & Installation

www.Carter-Health.com

Cleanrooms provided by Carter-Health is the cost-effective choice to meet ISO-04 to ISO-8 requirements. Designs are customized and very specific to each customer's work-flow requirements and space constraints. Custom layouts not only consider room configuration but also furniture/storage design and ancillary equipment placement. Design services include initial plan development and can include final stamped architectural drawings which can be submitted for permitting and local jurisdiction approval.


Once design plans are finalized, they are sent to the manufacturing facility where the room is pre-fabricated prior to shipment. This allows for quick, easy installation at the customer site resulting in minimum down-time for the pharmacy.

The room structure is made of anodized aluminum and can be ordered with a black or bronze finish. Glazing can either be Plexiglas or tempered glass. Hard-wall construction is also available when glass surfaces are not appropriate. Structural material used is specifically chosen to minimize particle count and microbial contamination.

All support equipment is provided with each room including:

- Gasketed Cleanroom Grade Ceiling Grid
- Hepa Filters (either standard or room side replaceable filters)
- Non-shedding Ceiling Tile
- Sealed / Gasketed Lights
- Pressure Gauges (positive and negative)
- Pass-thru Boxes
- Air Pressure Dampers
- Heat-welded Sheet Vinyl Flooring

Proper design and sturdy construction allows the room to be either totally free standing or installed in combination with existing walls. Use of existing walls saves space and expense. Installation typically takes five days. Carter-Health also arranges to have the room air balanced and environment certified by a third-party vendor.

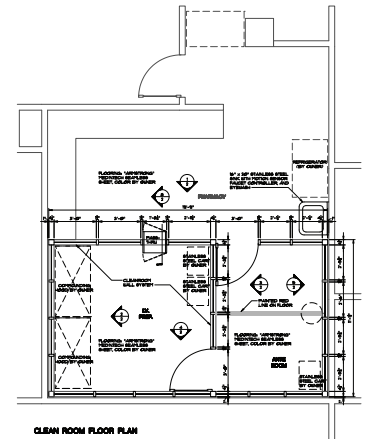

For more information contact us at: (407) 296-6689 or info@carter-health.com



Activity Documentation Software

www.Carter-Health.com

A.R.T. (Accurate Recording Technology) by **Carter-Health** is an online documentation software product that allows users to completely manage activities associated with USP 797 sterile compounding activities. As an online resource, the healthcare facility does not have to worry about integration of the product onto its network, making implementation quick and seamless. Pharmacy directors will have the confidence in an industry leading software product to record, manage and retrieve data that was developed with the help of their colleagues.

With the daily pressures of having to meet budget, A.R.T. was developed as an economical solution to help pharmacies keep record of the numerous activities required by USP 797.

Some of the features of A.R.T.:

- Online, secure documentation of data
- Various user-level sign-in
- Personnel, equipment and environment documentation
- Comparison performance among staff, facility and system
- Charting and graphing of data
- Ability to upload policy and procedures
- Personnel testing
- Instantaneous input of room certification results by third party vendors
- Reference guide
- Cleanroom video guide
- Unlimited number of user access
- Local and remote alerts (email, paging, text, phone)
- Technical support

Other add-on features:

- Personnel Scheduling
- Inventory Management
- Online ordering of disposable products

For more information contact us at: (407) 296-6689 or info@carter-health.com



PrePak Disposable Gowning

www.Carter-Health.com

Carter-Health disposable products are manufactured under the highest standards resulting in beautiful, comfortable and protective gear that you can trust. We provide everything you need for donning in ONE KIT! ONE Purchase Order and ONE price, saves time and minimizes waste.

Disposable Gowning PrePak Kits include the following items:

LAB COATS & GOWNS

Made of fluid resistant SMS non-woven fabric, custom designed and tailored to be protective without compromising comfort or style! Stay cool and comfortable all day in our light-weight, breathable gowning.

- Soft, light-weight fabric
- Highly fluid resistant
- Knit collars and cuffs provide extra comfort and protection

FILTRATION MASK

Fluid resistant mask affords the highest level of fluid and respiratory protection.

- Exceeds 99% filtration efficiency at 0.1 microns
- Ear loop design

SHOE COVERS

- Designed with exclusive anti-skid strips applied to the soles cut down on accidental slips and falls
- Made of durable spunbonded polypropylene
- Elastic top ensures snug fit
- Liquid repellent and abrasion resistant
- Cool and comfortable to wear

HAIR BOUFFANT

- 21" Large Bouffant and 24" Extra Large Bouffant for fuller hair styles
- Soft to the touch and comfortable

Inquire with us for details on kit quantities and pricing

See additional insert for other gowning and clean room supplies!

For more information contact us at: (407) 296-6689 or info@carter-health.com

Regular PrePak Kit



Contents Include:

- 1 White Lab Coat
- 1 Filtration Mask
- 1 Pair Shoe Covers
- 1 Hair Bouffant

100 Kits Per Case

Chemo PrePak Kit



Contents Include:

- 1 Tie back Chemo Gown
- 1 Filtration Mask
- 1 Pair Shoe Covers
- 1 Hair Bouffant

100 Kits Per Case



Our clean room supplies and cleaning products are all of the highest standard of quality and are competitively priced. We offer one-stop-shopping for most of the supplies and services you need to keep your facility clean and compliant.

STERILE 70% IPA

- Sterile, isopropyl alcohol solution filtered to 0.2 microns
- For use in critical environments
- For cleaning and decontaminating surface areas and equipment
- Manufactured and packaged in clean, ISO 5 environment
- Gamma radiated and double bagged
- Must be opened and stored in a clean room only
- Guaranteed sterile

CONTENTS: Sterile 70% (v/v) isopropyl alcohol solution irradiated to SAL of 1×10^{-6} . Product is sterile unless package seal has been broken. Batch numbers and certification is provided.

NON-LINTING WIPES

- Soft, absorbent, non-woven 9" X 9" wipers
- Particle free
- Laundered and packaged in clean room
- Must be opened and kept in a clean room only

TACKY MATS

- 24"X 32" blue sticky door mats
- Standard, numbered 30 sheets per mat
- 4 mats per case

GLOVE LINERS

- Comfort and relief for sensitive hands!
- 100% soft, non-irritating nylon knit
- Choose full or half-finger style
- Worn under latex free or nitrile gloves

At Carter-Health we make ordering the products you need for compliant activities easy. Check for availability through your wholesaler or GPO or to order direct, give us a call or email today!



For more information contact us at: (407) 296-6689 or info@carter-health.com